[Maintenance Notice]

- 1. P lease read this manual carefully before use.
- 2. F ree services can be provided with warranty card and invoice, welcome to contact us if you need technical support.
- 3.C ustomers can get 1 year warranty service from us with product related invoice and documents.
- 4 . P lease keep the warranty card properly so that the warranty can be obtained when the product needs repair.
- 5.T he company is not responsible for the following repair services beyond the product, but we can still provide you with paid services.
- P roducts due to improper use or storage.
- P roducts without warranty card or other valid documents.
- P roducts d ue to unstable power supply voltage o r beyond the normal voltage range or power supply and installation does not meet the electrical installation requirements.
- P romotional products.
- P roducts damaged caused by irresistible natural disasters.
- P roducts beyond maintenance period, damaged d ue to not follow the rules and methods of application.

[Fault Check]

| Fault condition | Processing check | |
|---|---|--|
| Power and other indicator signals are not lit | Check if the power cords securely inserted into the unit and it is loose. Check the power outlet for power supply and check the fuse | |
| Plasma generator | Under normal circumstances, there is a slight current sound and black There is a faint blue light in the dark. If found.The ion tube bursts and the ion tube needs to be replaced.0.5 A standard (with certified) fuse. | |

Please send the following to the company's designated maintenance department for repairs.

- 1. The problem cannot be solved as described above.
- 2. Foreign matter or moisture enters, and abnormal conditions occur.

Technology Specification

| Model | PS-505TT | Power | 42 W |
|------------------|------------------|----------------------|---------------------------------|
| Voltage | 220V AC/ 240V AC | Adapted air volume | 9000CFM(15300m ³ /h) |
| Application area | 700 m² | Weight | 12.4 Kg |
| Noise | ≤20dB | Ion Tube quantity | 5 (Standard) |
| Size | 710*280*220mm | Ion tube size | 520mm |
| Ion tube life | 17000 Hours | | |

Warranty Card

(Please keep it properly)

| Product Name | | Product Number | | |
|-------------------------|-----------------|-------------------|--|--|
| Purchase Time | | Contact Number | | |
| Customer information | Name/company | | | |
| | contact address | | | |
| Sales company stamp: | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |



Plasma Air Disinfection Purifier Model: PS-505TT



[Precautions]

There are electronic devices installed inside, do not open the case to avoid the risk of electric shock. Please read this [user manual] carefully before using the machine and follow the below points of operation base on the manual.Otherwise It may cause damage to product, or even cause injury to yourself or others at varying degrees.


- This machine is designed for only indoor general using. Do not place it open-air or high temperature place.
- Before operating the machine, make sure the power cord is firmly plugged into the power outlet, and place the power cord in a safe position. Do not touch, install or unplug the power cord with wet hands to avoid electric shock accidents.
- Before unplugging the power cord, please turn off the machine power in the correct procedure, otherwise it may cause damage to the machine.
- If don't use the machine for a long time, please unplug the power supply.Before operation, please check whether the air inlet and outlet positions of the machine are blocked.
- Do not put debris at the air inlet or outlet, because there is the fan installed inside with high-speed rotation, it may caused injured if touch it.
- In order to ensure the best performance of the machine, do not place any obstacles within 1 meter nearby of the air outlet position and air introduction position.
- The machine has precision components built inside. Don't open the case by yourself to avoid damage to the machine parts and may happen dangerous.
- Do not dismantle the front wind panel or the chassis during machine is operating to avoid dangerous.
- Pay attention to ventilation when using it together with fuel appliances. Please do not use machine in the kitchen.
- Before cleaning the chassis of the machine, make sure turn off the power and unplug it of the machine. Only use cloth with a little clean water and clean it softly, don't use volatile cleaners.
- Forbidding to place and using in the bathroom, otherwise it may cause electric shock.

[Use & Characteristics]

- Shell is metal material
- Plasma ions generator play a long-lasting and active positive and negative ion purification effect.
- This product can be used for a long-term.(Suggest clean the ion tube about 12 months later.
- S uitable for central air conditioning (FAN-coil) or ventilation system pipes, foodprocessing
 / F resh- keeping, catering, office buildings, shopping malls, hotels and guest rooms, nursing
 homes, hospitals, public places, places where fresh air is not enough, bacteria, viruses and
 peculiar smells are easily produced.


[Pipeline Installation]

- a) Mark size 665*235mm on the pipe.
- b) Using scissors or metal shears to cut of the marking areas
- c) Using self-acting screw to fix the equipment on the pipe.

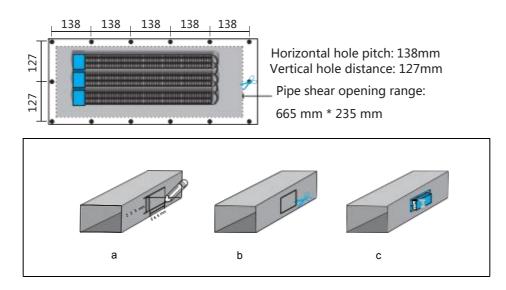

1.If the space is not enough,the equipment can't be installed in the pipe,please see the other install method below


- 2.Please choose the good airflow place
- 3. Turn on the power, the indicator light is on.
- 4.Rotary 1.2.3 switch to control ion quantity

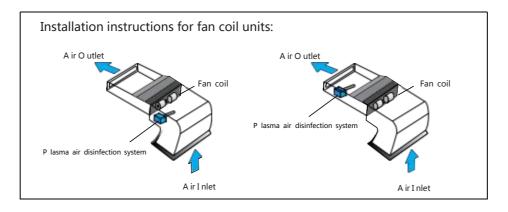

(Product Installation)


1.Checking the product before install.plug in the power to test the equipment, If damaged in transit, please contact customer service in time

2. This product should not be installed in the air temperature more than 60°, preferably in a well-ventilated position.

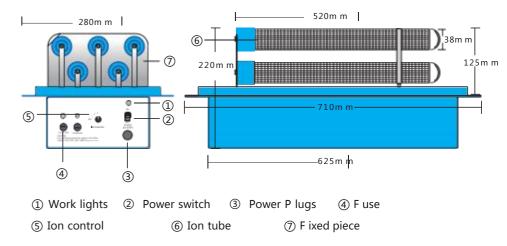

[Replace the ion tube]

Note: U nplug the power before operation! T his method is suitable for quickly replacing the ion tube without replacing the metal mesh.

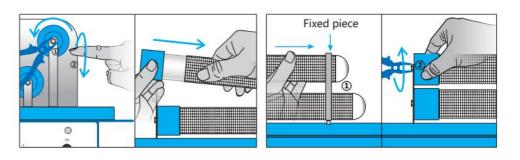

- 1. Use pliers to loosen the screw ①, and then remove the shrapnel of the fixing plate ②, Twist the ion tube counterclockwise a few times and remove the metal outer mesh.
- 2. Put the new ion tube into the fixing clip, tighten the screw ①, and then clamp the screw ②, and turn it clockwise a few times to replace the ion tube.